

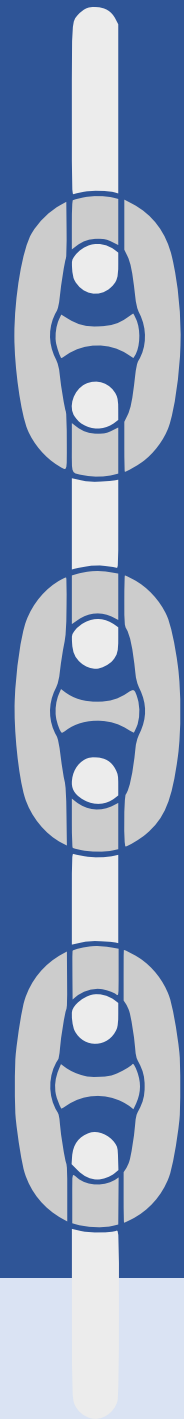


DISMANTLE A KENTER SHACKLE

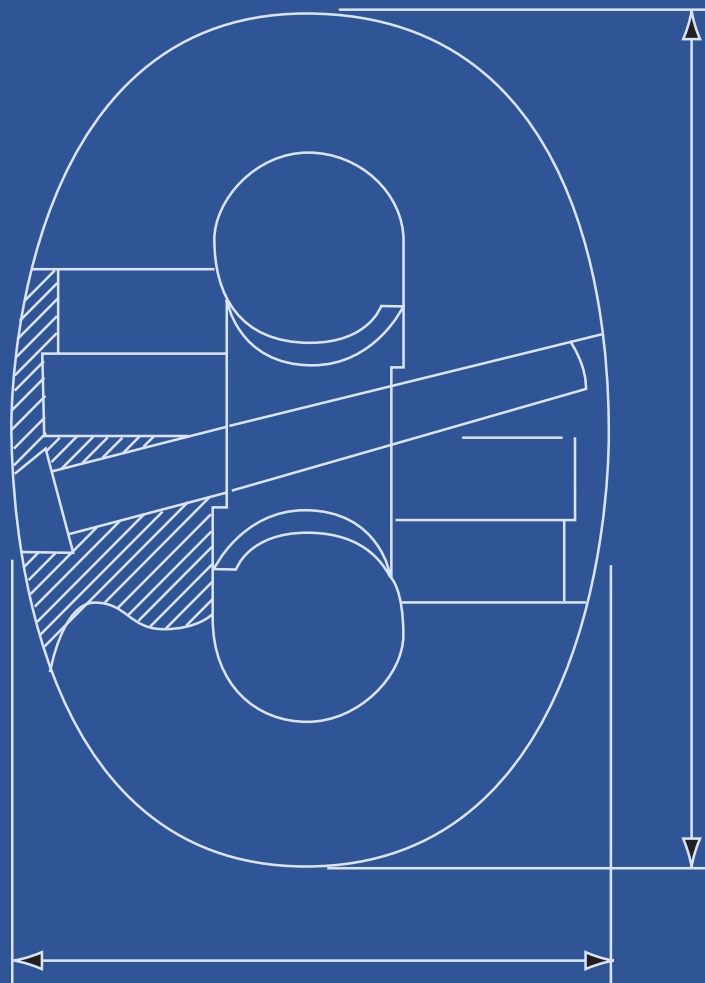


Dismantling – Kenter Shackle

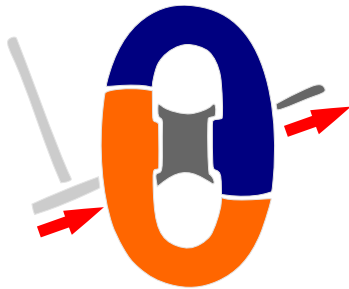

1 – Remove the Taper Pin

First of all, remove the Lead Pellet from the Taper Pin, it prevents it from sliding. Helping yourself with a hammer and a thin metal rod, you will remove the Taper Pin of the Kenter Shackle, which is securing the removable core.

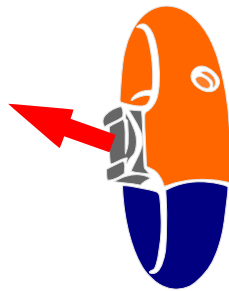

2 – Remove the Kenter

The core of the Kenter Shackle can be removed with the help of a hammer once the Taper Pin has been removed.

You can knock it straight out directly, do not apply unnecessary force.



3 – Disassemble

Once the Kenter and the Taper Pin have been removed, you are ready to disassemble the shackle by sliding on opposite directions the two halves, separating them as it is showcased in the illustration.

All instructions, drawings and recommendations are based on industry standards. Deviation margins, changes, and updates of procedures need to be taken in mind, this is your own responsibility and not from Castle Hills AS.